



Star Codes

*41	Read out the Local IP address of the device
*43	Mute Call
*44	Unmute Call
*46	Merge both parties calls, creating a 3 way conference call
*61	Reset the device
*65	Do Not Disturb ON
*66	Do Not Disturb OFF
*67	Disable Outgoing Calls
*68	Enable Outgoing Calls
*77	Block Outgoing Caller ID
*98	Voicemail Access

Services

- **Call waiting**
 - By Default this is always enabled

- **Caller ID**
 - Will show the City, Province, and the Phone number of the device when calling out.

- **Voice Mail**
 - By default, Voice mail is turned OFF. To enable it, please proceed to the customer account on <http://myaccount.getdialtone.com>.

- **Call Forwarding**
 - To add a forwarding number, please proceed in the customer account manager. “Phone number” → “Auto Forward”
 - Priority must be set to at least 2 and UP
 - Please enter the number in the following format **15141234567**

- **Speed Dialing**
 - Located in the customer account manager
 - Choose the speed dial tab on the left hand side,
 - Choose the number you wish to set the speed dial to (ranging from 0-9) then enter the destination/phone number you wish to call Ex. 051234567,
 - Finally, fill in the name for your contact and assign the speed dial.
 - To make the call using speed dial, pick up your phone, dial the speed dial number followed by the pound key.

- **3 way calling**
 - When calling out
 - Place the first call on hold with Flash
 - Dial the second number
 - Once it's connected, press *46#
 - When receiving a call
 - Place the first call on hold with Flash
 - Answer the second line
 - Once it's connected, press *46#